

Protec Covers

Towing Jacket Fitting Guide



These fitting instructions are aimed as a guide to the best way that we've found to fit your Protec cover.

Before fitting, it is essential that the front of your caravan is clean and free of grit. If any grit or dirt becomes trapped between the cover and the caravan, there is a risk of scratching.

Towing Jackets are designed for towing purposes only; we do not advise that they are kept on the caravan for storage.

Contents

- Towing Jacket
- Storage Bag
- A-Frame Strap
- Awning Stoppers (only applicable to certain models)
- SNAD Fasteners (only applicable to certain models)

Fitting Instructions

1. Unpack your Towing Jacket and identify the two sides. The panel with the logo is the left panel and the one without is the right panel.
2. Slide the left panel into the bottom of the offside awning channel with the Protec logo at the top and push it up until the entire panel is in the awning channel. Repeat this step with the right panel.

3. If you have received two awning stoppers, fit these at the bottom of the awning channels underneath the cover. Tighten these to secure them within the awning channel to stop the cover from sliding down.
4. Zip together the two panels starting from the bottom. **TIP:** The covers can sometimes feel tight at first; if you are struggling to connect the zips together, undo the Velcro at the sides of the cover to allow you to manoeuvre the cover and more easily zip the two panels together. Once zipped, re-attach the Velcro.
5. Locate the elasticated hooks across the bottom of the cover and attach these to the underside of the caravan fascia.
6. Attach the a-frame strap to the two buckles located at each side of the tow hitch, passing it underneath the tow hitch assembly.
7. If you received the white SNAD fasteners with your cover, attach these to the press studs across the top of the cover. Remove the backing off of the SNAD fasteners and adhere these to the caravan front.

Towing Jacket Features

If you chose to have grab handle access, you will be able to access your handles by undoing the Velcro flaps situated on the cover.

For access to your window, unzip the cover from the top.

To gain access to your locker (if applicable), unzip the cover from the bottom until you reach the bottom of your front window. Unfasten the elastic hooks, and one side of the a-frame strap. Undo the Velcro on both sides of the cover. There is a small section of Velcro in the top and bottom corners of the cover. Lift the bottom of each panel and attach them to the top corners via these Velcro strips to keep the cover out of the way while you're using your locker.

Care Instructions

Clean the cover using warm water with a soft brush, a hosepipe may be used but we do not advise the use of power washers.

DO NOT use any detergents or chemicals, as this will block the pores and affect the hydrophobic properties of the fabric. However, if you have any stubborn stains that will not be removed with just warm water, you can add soap flakes (the type you would use to hand-wash clothing) to the warm water to aid the washing.